

- This schematic has to be considered as example of the system functionality only and does not replace design by a qualified technician;
- The final schematic must be prepared respecting all the laws, norms and decrees in force, in order to facilitate a correct installation in compliance with the rule of the art;
- For the proper functioning of all system components, follow the instructions in the design, installation and user manuals provided by the manufacturer;
- This outline may be amended by the Ariston Group at any time without prior notice.


PAGE

SCHEME Hydraulic

05/12/2023



Pos.	Description			
1	BUFFER TANK 4 ATTACKS			
2	FANCOIL COOLING			
3	SYSTEM INTERFACE			
4	LIGHT GATEWAY			
5	HE KIT BELOW ODU + DRAIN PAN			
6	IDU FS MONO			
7	BY-PASS VALVE			
8	EXTERNAL UNIT HHP - MONOBLOC 1			
	-PH OR 3-PH			
9	UNDER FLOOR HEATING			
10	KIT ANTI-FREEZE			
11	HEATING-COOLING 3-WAY VALVE			
12	SAFETY GROUP			
13	EXTERNAL PROBE			
14	THERMOSTATIC MIXING VALVE			

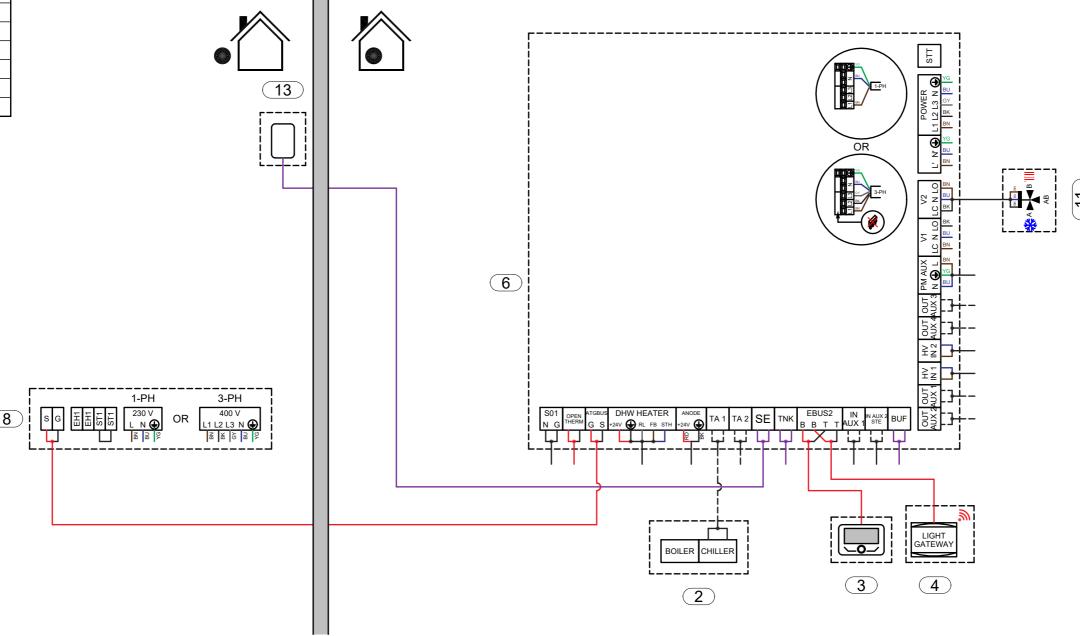

- This schematic has to be considered as example of the system functionality only and does not replace design by a qualified technician;
- The final schematic must be prepared respecting all the laws, norms and decrees in force, in order to facilitate a correct installation in compliance with the rule of the art;
- For the proper functioning of all system components, follow the instructions in the design, installation and user manuals provided by the manufacturer;
- This outline may be amended by the Ariston Group at any time without prior notice.

PAGE

SCHEME

05/12/2023



	Legend		
	Hydraulic		
Hot water			
	Cold water		
	DHW hot water		
	DHW cold water		
	DHW mixed water		
	DHW recirculation water		
	Refrigerant fluid		
	Gas connection		
	Electric connection		
Electric			
	BN Brown (L1)		
	BU Blue (N)		
	YG Yellow green (PE)		
	BK Black (L2)		
	GY Grey (L3)		
	RD Red		
	Dry contact		
	BUS connection		
	Generic signal		
	Sensor signal		

Legend					
	Hydraulic components				
2-WAY VALVE					
•	CIRCULATOR GENERIC				
Xw-	BY-PASS VALVE				
	MAGNETIC FILTER				
Y	DISCHARGE				
	POLYPHOSPHATE FEEDER				
₩\	SAFETY VALVE				
	SYPHON				
Image: control of the	NON RETURN VALVE				
×	SHUT-OFF VALVE				
A AB	THERMOSTATIC MIXING VALVE				
Ń	BALANCING VALVE				

Legend				
Drawing symbols				
A	INLET OR OUTLET AIR BLUE			
A	INLET OR OUTLET AIR RED			
**	COOLING			
	HEATING			
· /*	HEATING-COOLING			
3	WIFI			

SCHEME
Legend

DATE REV. PAGE
05/12/2023 3/5



⁻ This schematic has to be considered as example of the system functionality only and does not replace design by a qualified technician;

⁻ The final schematic must be prepared respecting all the laws, norms and decrees in force, in order to facilitate a correct installation in compliance with the rule of the art;

⁻ For the proper functioning of all system components, follow the instructions in the design, installation and user manuals provided by the manufacturer;

⁻ This outline may be amended by the Ariston Group at any time without prior notice.

MENU	N° PARAMETER	NAME	DESCRIPTION-OPTIONS	VALUE TO BE SET	RANGE	DEFAULT
HHP Energy Manager	1.0.0	IDU type	Defines the type of the internal unit: 0 = None 2 = Hydraulic module 3 = Light	2 = Hydraulic module	[0-3]	2
	1.0.1	ODU type	Defines the type of the outdoor unit: 1 = Heat Pump	1 = Heat pump	1	1
	1.0.6	Thermoregulation	Activates or deactivates temperature control: 0 = Not Active 1 = Active	Up to user	[0-1]	1
	1.1.8	System flow T selection	Defines which kind of device is used by the product to determine flow temperature to system: 0 = HP water flow temp 1 = System flow T	1 = System flow T	[0-1]	1
	1.3.0	CH aux heat source activation logic	Defines which is the activation logic of secondary heat sources during heating cycle: 0 = Heat integr. and backup 1 = HP failure backup	Up to user	[0-1]	1
	1.3.1	CH active resistance stages	Defines how many resistance stages are enabled during heating cycle: 0 = 0 Stage 1 = 1 Stage 2 = 2 Stages 3 = 3 Stages	Up to user	[0-3]	2 or 3 According to the IDU size
	1.3.2	ECO / COMFORT	Defines increasing reactivity of secondary heat sources during heating cycle from most economical/ecological (longer delay time) to most comfortable (shorter delay time): 0 = Eco Plus 1 = Eco 2 = Average 3 = Comfort 4 = Comfort Plus 5 = Customizable	Up to user	[0-5]	2
	1.8.0	Cooling mode activation	Activates the cooling mode: 0 = Not active 1 = Active	1 = Active	[0-1]	0
	1.12.9	Exogel kit activation	to activate when the antifreez kit is installed: 0 = OFF ¦ 1 = ON	1 = ON	[0-1]	1
HHP Energy Manager (DHW service)	1.0.2	Tank management	In case of DHW tank, to set which kind of sensor the DHW charge is managed through: 0 = None 1 = Storage with NTC 2 = Storage with Thermostat	1 = Storage with NTC	[0-2]	1
	1.4.0	DHW aux heat source activation logic	Defines which is the activation logic of secondary heat sources during DHW cycle: 0 = Heat integr. and backup 1 = HP failure backup	Up to user	[0-1]	0
	1.4.1	DHW active resistance stages	Defines how many resistance stages are enabled during DHW cycle: 0 = 0 Stage 1 = 1 Stage 2 = 2 Stages 3 = 3 Stages	Up to user	[0-3]	2 or 3 According to the IDU size
	1.4.2	Delay timer	Time required for starting the calculation of the DHW integration with the auxiliary sources or with the heating elements.	Up to user	[10 - 120] min	120 min
	1.4.3	Release integral threshold	Activation threshold for DHW integration expressed in °C*min	Up to user	[15 - 200] °C*min	200°C*min
	1.9.0	DHW Comfort Setpoint Temperature	Defines the comfort DHW set-point temperature.	Up to user	[35 - 65]°C	55°C
	1.9.1	DHW Reduced Set Point Temperature.	DHW Reduced Set Point Temperature	Up to user	[35 - 60]°C	35°C
	1.9.2	Comfort function	Defines when comfort function must be active: 0 = Disabled 1 = Time Based 2 = Always active	Up to user	[0-2]	2
	1.9.3	DHW Operation Mode	0 = Standard 1 = Green 2 = HC - HP 3 = HC - HP 40	Up to user	[0-3]	1

This schematic has to be considered as example of the system functionality only and does not replace design by a qualified technician;

| SCHEME | Parameter list | DATE | REV. | PAGE | 05/12/2023 | 4 / 5



⁻ The final schematic must be prepared respecting all the laws, norms and decrees in force, in order to facilitate a correct installation in compliance with the rule of the art;

⁻ For the proper functioning of all system components, follow the instructions in the design, installation and user manuals provided by the manufacturer;

⁻ This outline may be amended by the Ariston Group at any time without prior notice.

MENU	N° PARAMETER	NAME	DESCRIPTION-OPTIONS	VALUE TO BE SET	RANGE	DEFAULT
	1.9.6	Thermal cleanse function	0 = OFF ¦ 1 = ON	Up to user	[0-1]	1
	1.9.7	Thermal Cleanse start time [hh :mm]	Start time of Thermal cleanse function	Up to user	[00:00 - 23:45] [hh:mm]	01:00
HHP Energy	1.9.8	Thermal cleanse cycle frequency	Frequency of Thermal cleanse cycle	Up to user	[24 h-30 d]	30 d
Manager (DHW service)	1.23.0*	Thermal Cleanse target temp	Defines the setpoint of thermal cleanse cycle	Up to user	[60-70°]	60°C
(Billy service)	1.23.1*	Antilegionella target temperature duration	Defines the time in which the Thermal cleanse Target temp has to be mantained	Up to user	[1-2] h	1h
	1.23.2*	Max Duration Antilegionella	Defines the Max time in which the system can perform and complete the Thermal cleanse cycle.	Up to user	[4-12] h	6h
Zone 1 parameter (For all thermoregulation parameters refer to the installer manual)	4.8.3	Heating Controller	Define with which device the heat request is performed: 0 = None 1 = Room thermostat (Thermostat connected to TA1 of Energy Manager) 2 = Room sensor (Room sensor on eBus2)	2 = Room sensor	[0-2]	2
	4.8.4	Cooling controller	Define with which device the heat request is performed: 0 = None 1 = Room thermostat 2 = Room sensor	1 = Room thermostat	[0-2]	2
	User Menu/Zones Management	Operatione Mode	Define the operation mode of the zone: - Off (heat request inhibited) - Manual (setpoint temperature for the zone is maintained for 24h) - Time program (setpoint temperature of the zone follows the hourly programme profile. In case of Room thermostat, the reduced temperature level inhibits the heat request)	Up to user		
	4.2.9	Heat request mode	Define the Heat request mode for the zone 0 = Standard 1 =RT time program exclusion (In case of Room thermostat, the reduced temperature level doesn't inhibit the heat request) 2 = Forcing heat demand (Heat request always true)	Up to user	[0-2]	0

SOFTWARE COMPATIBILITY		
	Starting from 00.07.12	
New Sensys	*Starting from 00.28.03	
	Starting from 22.05.27	
Energy Manager 2.0	*Starting from 22.26.05	
TDM	Starting from 21.01.186	

- This schematic has to be considered as example of the system functionality only and does not replace design by a qualified technician;
- The final schematic must be prepared respecting all the laws, norms and decrees in force, in order to facilitate a correct installation in compliance with the rule of the art;
- For the proper functioning of all system components, follow the instructions in the design, installation and user manuals provided by the manufacturer;
- This outline may be amended by the Ariston Group at any time without prior notice.

